


Equipping a Fencer for Epee fencing

What Kit?

Assuming that you already have 800N plastron, 350N Jacket, 350N Breeches, Epee Mask and an Electric Epee you will also require the following equipment:

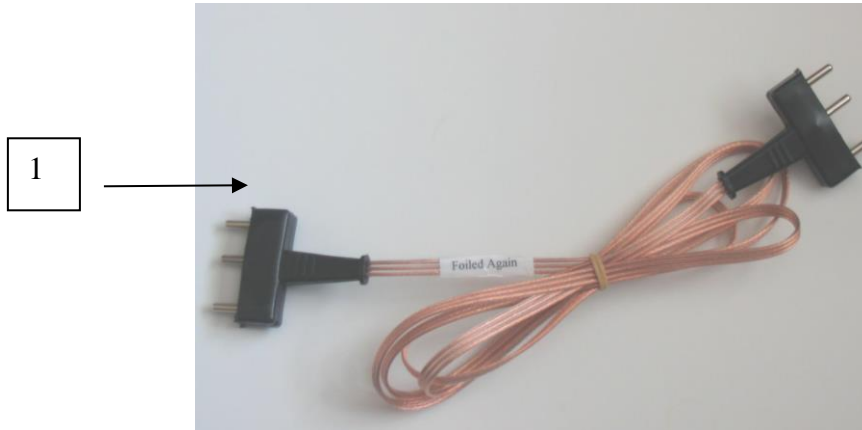

1. Epee Body Wire.

Connecting

1. Push the Epee connector plug of the body wire down the sleeve of your fencing jacket as shown:



2. Put your jacket on

3. Connect the 3-pin plug into the Spool socket.




4. Fit the retaining clip to secure the plug-in place.



5. Then Clip the Spool socket to the Loop on the back of your Jacket.




6. Put on your fencing glove so that the sword plug is protruding through the side.


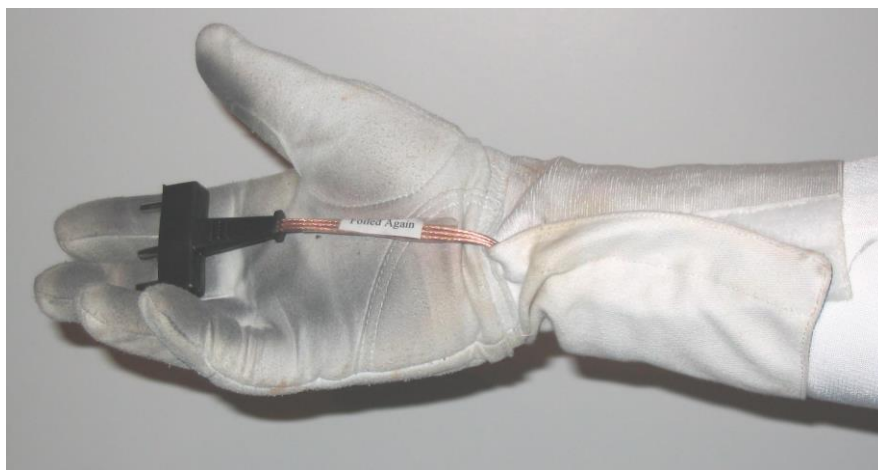


Note Side Velcro fastening gloves to be used.

7. Now pick up the Electric Epee and Align the body wire plug with the socket on the Epee Guard

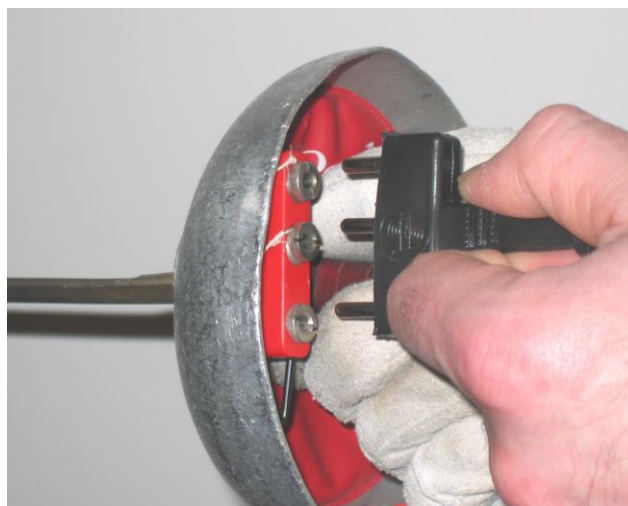

8. Insert the plug and slide the retaining clip over the plug.

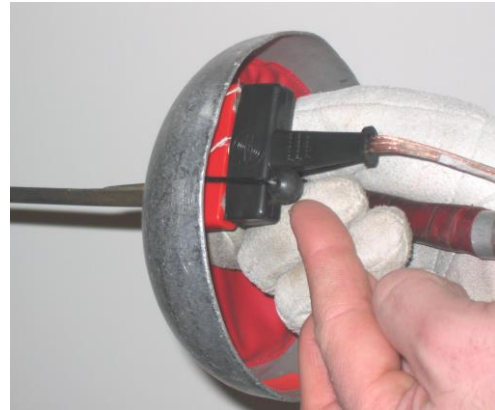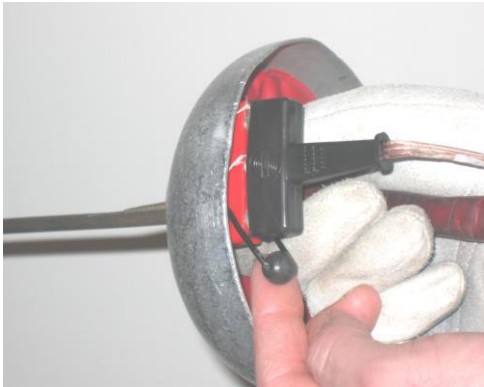

When your opponent is connected ensure, the box is set to Epee and switch on. There should be no buzzing sound or white/green or red lights flashing.

To Test:

1. Hit your opponent on target only a green or red light should register. (Note when you hit your opponent the coloured light on your side of the box lights up to indicate that you have scored a hit)
2. Note hitting the floor will result in a coloured light lighting up if a Metallic Piste is used then no lights will register when the floor is hit.
3. Hit your opponent's Guard and no hits should register.

Important read the instructions over leaf.

After the Bout

It is very important not to let the spool connector go when disconnecting the Fencers. This will cause the internal spool connectors to jump off their seating resulting in the spool not working.

**PLEASE GENTLY TAKE THE CONNECTOR
BACK TO THE SPOOL**

